




iBEAM CONSTRUCTION CAMERAS

iBEAM® OnSite Fixed™ Construction Camera INSTALLATION DIAGRAM

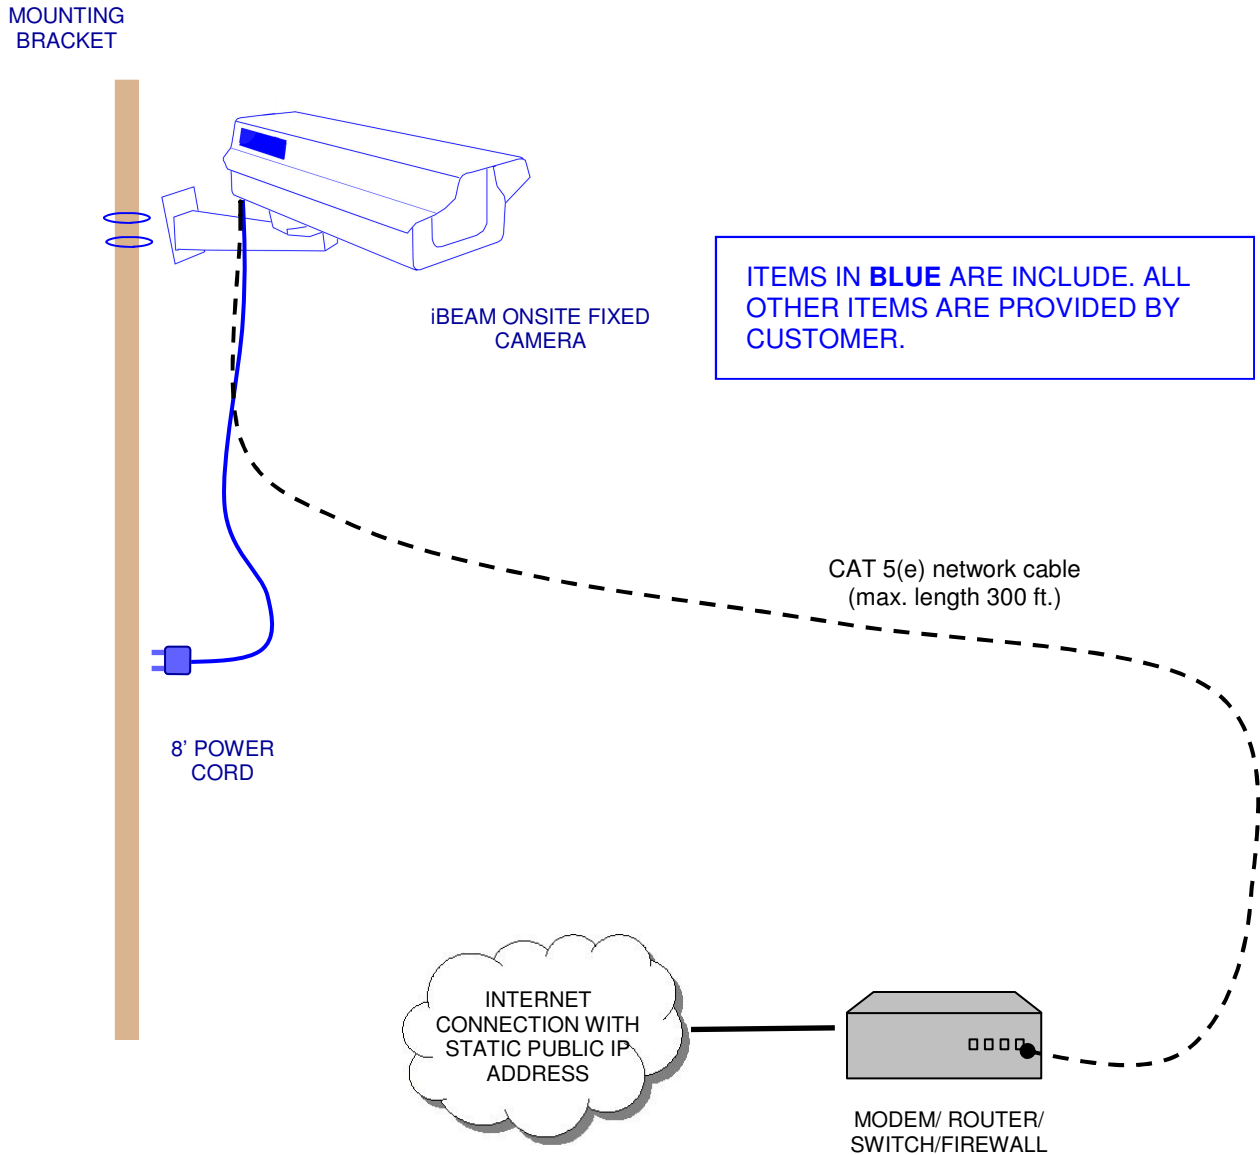

**YOUR NETWORK MAY VARY. CONSULT YOUR NETWORK ADMINISTRATOR.

Your iBEAM OnSite Fixed Construction Camera system has been programmed with the IP addresses you provided:

OnSite Fixed Camera: _____

800.403.0688

www.ibeamsystems.com



iBEAM® ONSITE FIXED™ Construction Camera INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN

1. READ THESE INSTRUCTIONS.
2. TEST THE CAMERA ON THE GROUND. Plug in the camera and confirm proper operation before you install the camera on your mounting surface.

Getting Started

Remove all components from shipping box.

Install the Camera

Attach the camera arm to the mounting surface (pole or wall) using the supplied hardware.

Attach camera enclosure to the camera arm.

Connect network cable to your modem.

Plug the camera enclosure into 120V AC power.

Configure your Network

Your network must be configured to allow outside traffic to the camera. The most common method for this is to use port forwarding on your network's router to forward all outside requests on port 80 to the camera's network IP address. See other side for the camera's network IP addresses.

SEE INSTALLATION DIAGRAM ON NEXT PAGE